


SaniPod™

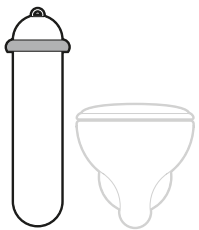


SaniPod

Important:

- The recommended location for the SaniPod is the back wall of cubicle on the left hand side of the toilet as illustrated.
- Check the widest part of the SaniPod (grey ring) fits to ensure there is room for the toilet seat to be lifted and lowered.
- The SaniPod should be elevated 100mm above ground to allow good floor clearance.
- Top bracket/sensor box wall plate should be positioned at a minimum height of approximately 700mm above floor for best results. Secure into a wall stud. Use wall anchors if a wall stud cannot be located.


SaniPod manual

Recommended specifications

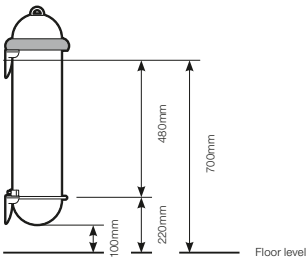


SaniPod auto

Recommended specifications

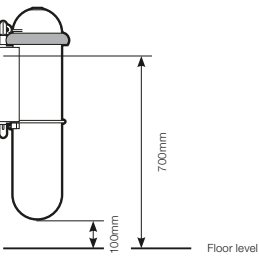

SaniPod™ manual

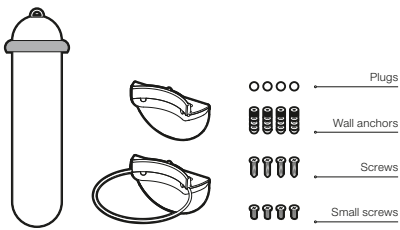


SaniPod manual

Step 01

Find a true level with plumb line or spirit level.
Mark bracket locations as per recommended specifications, ensuring top bracket aligns with bottom bracket.

Secure brackets to wall with screws or wall anchors depending on wall surface and structure.

TAPE OPTION: Before bonding to tiled or ceramic surfaces degrease wall and bracket and follow adhesives' instructions. We recommend using a tape primer and VHB (very high bond) double sided tape.

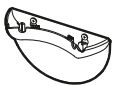


Step 02

Place cover on top bracket.
Secure with small screws.



Step 03

Secure retaining ring into grooves of bottom bracket cover.
Place cover on bottom bracket and secure with small screws.

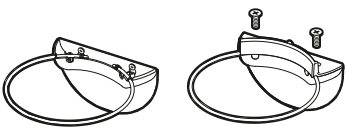

Step 04

Insert plugs into covers.




SaniPod™ manual



SaniPod manual


To attach SaniPod to brackets.

Insert SaniPod capsule into retaining ring and secure locking mechanism onto top bracket tab. Turn anti-clockwise to lock into place.

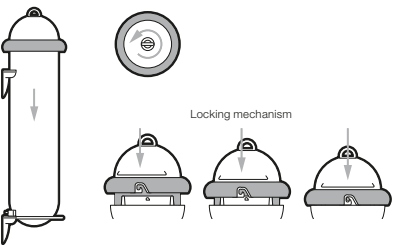


To remove SaniPod from brackets

Turn clockwise and lift.

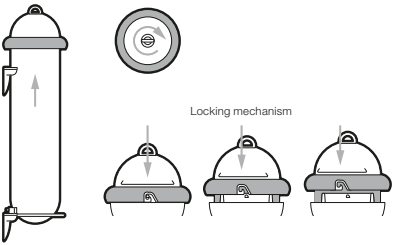

To remove lid of SaniPod

Place both hands on opposite sides of grey ring and ease upwards. This will remove both grey ring and lid.

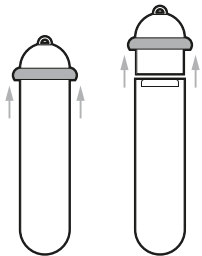


To re-install the SaniPod lid and grey ring onto the SaniPod capsule

Align arrow on grey ring to locking mechanism on the back of the SaniPod and push down to secure.

Information

For more information or orders, visit our website or contact us at: enquiries@saniPod.com
www.saniPod.com


SaniPod™ auto

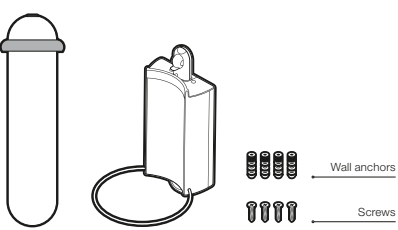

SaniPod auto

Step 01


Push release button up to remove wall plate from sensor box.

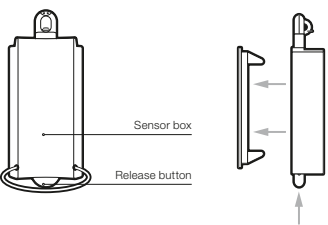

Step 02



Find a true level with plumb line or spirit level.
Mark drill wall plate locations as per recommended specifications.
Secure wall plate to wall with screws or wall anchors depending on wall surface and structure.
Install at minimum distance of 700mm from floor.

TAPE OPTION: Before bonding to tiled or ceramic surfaces degrease wall and wall plate and follow adhesives' instructions. We recommend using a tape primer and VHB (very high bond) double sided tape.

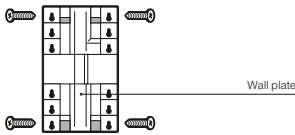


Step 03

Insert retaining ring into grooves of sensor box and secure into place.

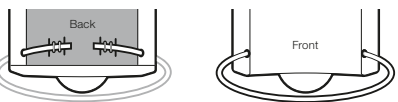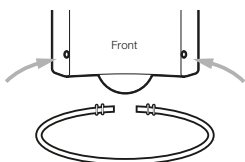


Step 04

Insert 4x D size Alkaline Batteries (not supplied).
NOTE: Tongue flickers red once when battery is low and flickers red twice when flat.

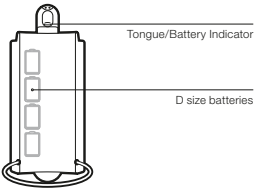


Step 05

Attach sensor box to wall plate and click to secure.

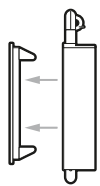

Step 06


Activate infra-red sensor to test functioning.

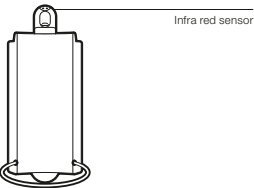

Information

For more information or orders, visit our website or contact us at: enquiries@saniPod.com
www.saniPod.com

SaniPod™ auto

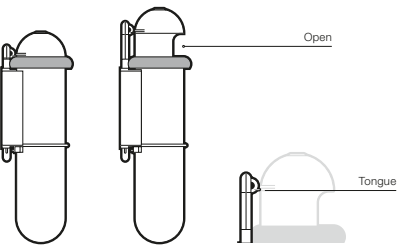


SaniPod auto

Important

Activate sensor to open position and disengage lid from tongue before attaching or removing SaniPod auto capsule.


To attach SaniPod to sensor box

Insert SaniPod capsule into retaining ring and secure locking mechanism onto bracket tab. Turn anti-clockwise to lock into place.

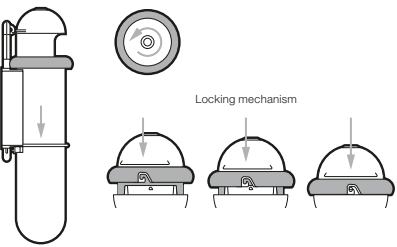


To remove SaniPod from sensor box

Detach lid from tongue, turn clockwise and lift.

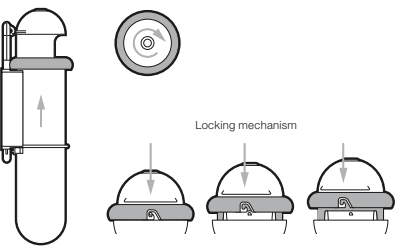

To remove lid of SaniPod

Place both hands on opposite sides of grey ring and ease upwards. This will remove both grey ring and lid.

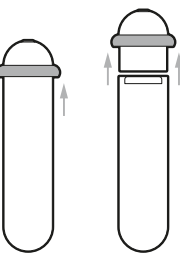

To re-install the SaniPod lid and grey ring onto the SaniPod capsule

Align arrow on grey ring to locking mechanism on the back of the SaniPod and push down to secure.